

Engine 615

Oil type

Engine oil as specified for the engine

refer to job no. 151

- Remove filter cover, remove filter element.
- Check oil level in filter housing.
- If required, add engine oil up to upper mark on filter housing.

Note: If highly contaminated (dust deposited in filter housing) clean oil bath air filter and replace oil charge (refer to job no. 205).

